

Outdoor Sensor Humidity, Temperature active with weather shield

Active sensor (0...10 V) for measuring the relative or absolute humidity and temperature in outdoor areas. Instead of the humidity signal, the enthalpy or the dewpoint can be selected as an output signal. IP65 / NEMA 4X rated enclosure.





Type Overview

| Туре | Output signal active temperature | Output signal active humidity |
|----------|----------------------------------|-------------------------------|
| 22UTH-11 | DC 05 V, | DC 05 V, DC 010 V |
| | DC 010 V | DC 010 V |

| Technical Data | | |
|-----------------|---------------------------|---|
| Electrical data | Power supply DC | 1524 V, ±10%, 0.3 W |
| | Power supply AC | 24 V, , ±10%, 0.5 VA |
| | Electrical connection | Removable spring loaded terminal block max. 2.5 mm ² |
| | Cable entry | Cable gland with strain relief Ø68 mm |
| Functional data | Sensor Technology | Polymer capacitive sensor with stainless steel wire mesh filter |
| | Multirange | 4 measuring ranges selectable |
| | Output signal active note | Output DC 05/10 V with Jumper adjustable Voltage output: min. 10 $k\Omega$ load |
| | Application | Air |



| | Technical data sheet | | | 22UTI | H-11 |
|----------------|--|--|--|---|-----------------|
| Measuring data | Measuring values Temperature Relative humidity Dew point Enthalpies Absolute humidity | | | | |
| | Measuring range humidity | | .H. non-cond | ensing | |
| | Measuring range temperature | | | | |
| | | Attention: restricted I Safety dat | | | |
| | | Setting | range [°C] | range [°F] | Factory setting |
| | | S0 S1 S2 S3 | -4060°C 050°C -1535°C -2080°C | -40160°F 40140°F 0100°F 0200°F | ~ |
| | Measuring range absolute humidity | • | e at the transducer: n³ (default setting) n³ | | |
| | Measuring range enthalpy | 085 kJ/k | /kg | | |
| | Measuring range dew point | • | at the transd default setting | | |
| | Accuracy humidity | ±2% between | een 1090% | r.H. @ 21°C | |
| | Accuracy temperature active | ±0.5°C @ | 25°C [±0.9°F | @ 77°F] | |
| Materials | Cable gland | PA6, white |) | | |
| | Housing | | exan, white 7 NBR70, blac | ck | |
| Safety data | Ambient humidity | Short-term | condensatio | n permitted | |
| | Medium humidity | Short-term | condensatio | n permitted | |
| | Ambient temperature | -3550°C | [-30120°F] | | |
| | Fluid temperature | -3550°C | [-30120°F] | | |
| | Protection class IEC/EN | III Safety E | Extra-Low Vol | tage (SELV) | |
| | Protection class UL | UL Class 2 | 2 Supply | | |
| | EU Conformity | CE Markin | ıg | | |
| | Certification IEC/EN | IEC/EN 60 | 730-1 | | |
| | Certification UL | | c. to UL60730 30-1:02/-2-9 | -1A/-2-9/-2-13 | , CAN/ |
| | Degree of protection IEC/EN | IP65 | | | |

ISO 9001

Quality Standard



Safety notes



This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorised modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets.

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Remarks

General remarks concerning sensors

When using lengthy connection wires (depending on the cross section used) the measuring result might be falsified due to a voltage drop at the common GND-wire (caused by the voltage current and the line resistance). In this case, 2 GND-wires must be wired to the sensor - one for supply voltage and one for the measuring current.

Sensing devices with a transducer should always be operated in the middle of the measuring range to avoid deviations at the measuring end points. The ambient temperature of transducer electronics should be kept constant. The transducers must be operated at a constant supply voltage (±0.2 V). When switching the supply voltage on/off, onsite power surges must be avoided.

Build-up of Self-Heating by Electrical Dissipative Power

Temperature sensors with electronic components always have a dissipative power which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. The dissipative power should be taken into account when measuring temperature. In case of a fixed operating voltage ($\pm 0.2~\rm V$) this is normally done by adding or reducing a constant offset value. As Belimo transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0...10 V / 4...20 mA have a standard setting at an operating voltage of DC 24 V. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of a trimming potentiometer on the sensor board.

Application Notice for Humidity Sensors

Refrain from touching the sensitive humidity sensor/element. Touching the sensitive surface will void warranty.

For standard environmental conditions the manufacturing accuracy specified in the datasheet will be covered by the calibration warranty for two years. When exposed to harsh environmental conditions such as high ambient temperature and/or high levels of humidity, or presence of aggressive gases (i.e. chlorine, ozone, ammonia) the sensor element may be affected and readings may be outside specified accuracy. Replacement of deteriorated humidity sensors due to harsh environmental conditions are not subject of the general warranty.

Scope of delivery

| Description | Туре |
|--------------------------|-----------|
| Mounting plate L housing | A-22D-A10 |
| Rain cover, for 22UTH | A-22U-A01 |

Dowel Screws


Accessories

| Optional accessories | Description | Туре |
|----------------------|-------------|------|
| | | |

Replacement filter, wire mesh, Stainless steel A-22D-A06




Wiring diagram

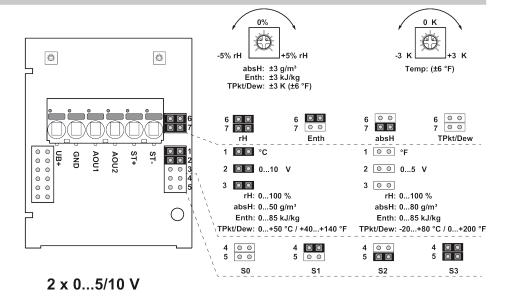

rH Relative humidity
absH Absolute humidity
EntH Enthalpy
TPkt/Dew Dew point

(Measurement value available on Output AOU1)

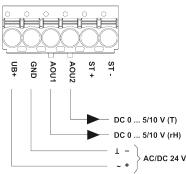

Connectors ST+ / ST- are only used for sensor types which additionally have a passive resistance sensor element for temperature measurement.

Correct temperature values are only available, when the humidity output AOI1 and both inputs UB + are connected.


The adjustment of the measuring ranges is made by changing the bonding jumpers. The output value in the new measuring range is available after 2 seconds.


| Setting | range [°C] | range [°F] | Factory |
|---------|------------|------------|---------|
| | | | setting |
| S0 | -4060°C | -40160°F | |
| S1 | 050°C | 40140°F | |
| S2 | -1535°C | 0100°F | |
| S3 | -2080°C | 0200°F | ~ |



Dimensions

Dimensions

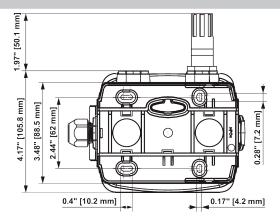

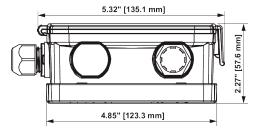

| Туре | Weight | |
|----------|---------|--|
| 22UTH-11 | 0.28 kg | |